



# AutoPID *plus*

## PID TYPE DIGITAL TEMPERATURE CONTROLLER

Ver.02



AUTOPI2-141T-11757-2601

### 1. DESCRIPTION

The **AutoPID *plus*** is a digital controller for heating and cooling processes. It uses a PID (proportional, integral, and derivative) type controller, which enables to control the temperature with minimal fluctuation. Product complies with UL Inc. (United States and Canada).

### 2. APPLICATION

- Freezing and heating chambers
- Refrigeration plants
- Set of compressors etc.

### 3. TECHNICAL SPECIFICATIONS

- **Power Supply:** 90 to 264Vac (50/60 Hz)
- **Controlled Temperature:** -50 to 100°C (with resolution of 0.1°C)
- **Indication Accuracy:** 0.1°C between -10 and 100°C and 1°C for the rest of the scale
- **Controlling Accuracy:** 0.1°C for the whole scale
- **Proportional Outputs:** Voltage output: 0~10Vdc 5mA  
PWM: Adjustable period 5mA
- **Alarm Output:** 5(3)A 250Vac 1/8HP
- **Dimensions:** 71 x 28 x 71mm
- **Operation temperature:** 0 to 50°C
- **Operation humidity:** 10 to 90% RH (without condensation)

### 4. CONFIGURATION

#### 4.1 - Setpoint adjustment

Press **SET** for 2 seconds until it displays **SEt** and then release the key. The operation temperature you set is displayed. Use **▼** and **▲** keys to change this value and press **SET** to configure the new value when ready.

#### 4.2 - Accessing the function menu

Press **▼** and **▲** keys simultaneously for 2 seconds until it displays **Fun** and then release the keys. When **F01** is displayed, press **SET** (shortly) and enter the code (123) by using the **▼** and **▲** keys. Press **SET** to confirm. You can use **▼** and **▲** keys to access other functions. Use the same procedure to adjust other functions.

To exit the menu and return to the normal operation, hold the **SET** key pressed for a while to display **--**.

#### 4.3 - Advanced functions

Fun	Description	Min	Max	Default	Unit
F01	Access code (123)	-99	999	0	-
F02	Static gain	0.0	99.9	1.0	-
F03	Integral time	0	999	12	x 10 sec.
F04	Derivative time	0	999	3	x 10 sec.
F05	Anti-windup time	0	999	4	x 10 sec.
F06	Setpoint gain in the proportional control	0.0	1.0	1.0	-
F07	Control type (0 = cooling, 1 = heating)	0	1	0	-
F08	Output amplitude for autotuning	10	100	40	%
F09	Temperature hysteresis for autotuning	0.1	20.0	5.0	°C
F10	Steady temperature validation time	1	999	6	x 10 sec.
F11	Autotuning starting method	0	3	0	-
F12	Max. amount of time for stabilizing the temperature before autotuning activation	1	999	999	min.
F13	Low temperature alarm	-50.0	100.0	-50.0	°C
F14	Hysteresis for resetting the low temperature alarm	1.0	10.0	1.0	°C
F15	High temperature alarm	-50.0	100.0	100.0	°C
F16	Hysteresis for resetting the high temperature alarm	1.0	10.0	1.0	°C
F17	ON-OFF cycle time for alarm output	0	210	0	sec.
F18	PWM output period	1	999	1	x 10 ms.
F19	Output value in the manual mode	0	100	0	%
F20	Output value when error occurs	0	100	50	%
F21	Minimum setpoint allowed to the final user	-50.0	100.0	-50.0	°C
F22	Maximum setpoint allowed to the final user	-50.0	100.0	100.0	°C
F23	Indication offset	-5.0	5.0	0.0	°C
F24	RS-485 network address	1	247	1	-

#### 4.4 - Function description

##### F01 Access code (123)

The access code is needed when you want to change the configuration settings. If you just want to view the parameters you don't need to input the access code.

##### F02 Static gain (K)

This gain actuates in the system error (proportional control) and is related to stabilization time and control circuit speed. The static gain can be calculated automatically by the autotuning.

##### F03 Integral time (Ti)

The integrative control is responsible for canceling an error when the system is in a steady condition and is also responsible for the system stabilization time. This parameter can be calculated automatically by the autotuning.

##### F04 Derivative time (Td)

This is responsible for stabilizing the system in the setpoint and canceling the overshoot. It can be calculated automatically by autotuning, just as the other parameters.

##### F05 Proportional output anti-saturation system time (Tt)

This is responsible for preventing the proportional control output from becoming saturated due to integral control action (windup). The value recommended for this function is:

$$\sqrt{(Ti * Td)^7}$$

The value for this parameter is calculated automatically at the end of autotuning by using Ti and Td parameters according to the formula above.

##### F06 Setpoint influence in the static gain

This is the setpoint gain when calculating the system error. It is used to reduce the effect of an eventual noise from the temperature sensor. When you reduce this parameter value, you increase the immunity to noise.

##### F07 Control type

Indicates the process type that the controller will operate.

- 0 Cooling
- 1 Heating

##### F08 Output amplitude for autotuning

Initial amplitude of the signal to be applied in the proportional output during the autotuning stage.

This value is recalculated automatically by the controller during the autotuning and it must be chosen so that the system can distinguish the temperature oscillation around the setpoint and the hysteresis.

##### F09 Temperature hysteresis for autotuning

This hysteresis is used together with the setpoint to control the temperature oscillation in the autotuning.

##### F10 Steady temperature validation time

This is the time used by the controller to make sure that system temperature is steady and stabilized.

##### F11 Autotuning starting type

This function defines the mode in which the autotuning must be started.

- 0 Only manual start;
- 1 Performs autotuning when automatic control is activated;
- 2 Performs autotuning if the temperature does not stabilize inside the period of time configured in F12;
- 3 Performs autotuning when automatic control is activated or if the temperature does not stabilize inside the period of time configured in F12.

##### F12 Max. time for system stabilization

Maximum time for temperature stabilization before executing autotuning (if configured).

##### F13 Low temperature alarm

Temperature for activating the low temperature alarm.

##### F14 Hysteresis for resetting the low temperature alarm

Hysteresis for resetting the low temperature alarm.

##### F15 High temperature alarm

Temperature for activating the high temperature alarm.

##### F16 Hysteresis for resetting the high temperature alarm

Hysteresis for resetting the high temperature alarm.

##### F17 ON-OFF cycle time for alarm output

Cycle time in which the alarm output is turned ON and OFF. If the alarm output is intended to remain always ON, this parameter must be set to "0".

##### F18 PWM output period

Total time the PWM output remains in the ON and OFF state. The time for each state depends on the proportional output value.

##### F19 Output value in the manual mode

PWM and proportional output value when the controller is in the manual mode.

##### F20 Output value when a sensor error occurs

PWM and proportional output value when an error occurs in the temperature readings.

##### F21 Minimum setpoint allowed to the final user

Lower limit to avoid that extremely low temperatures be configured by mistake.

##### F22 Maximum setpoint allowed to the final user

Upper limit to avoid that extremely high temperatures be configured by mistake.

### F23 Indication offset

Allows to compensate an eventual variation of temperature readings caused by sensor replacement.

### F24 RS485 network controller address

Device address in the network for communication with Sitrad® software application.

**Warning:** it is not allowed to have more than one device with the same address in a network.

## 5. AUTOTUNING

The **AutoPID<sub>plus</sub>** uses the Critical Period method to calculate automatically its PID parameters. This method consists in making the system temperature oscillate around the setpoint so that the necessary data can be collected to adjust the controller. The user must input two parameters for the method to work properly: Temperature Hysteresis (F09) and Output Amplitude (F08). Both parameters must be chosen to permit a recognizable oscillation around the setpoint. The autotuning operation time will vary for each response from the system. Systems with a bigger cooling/heating capacity will have quicker responses and the autotuning function will finish the data collection quicker.

The method for starting the autotuning can be configured in the function F11 and may operate in the following modes:

**Manual activation:** The autotuning can be activated either through the controller keyboard or through the Sitrad® software.

**When activating the automatic control:** The autotuning will be executed every time the controller enters the automatic control mode (PID).

**Temperature not steady:** The autotuning will be executed every time the temperature does not stabilize inside the time period programmed in the function F12.

**When activating the automatic control and the temperature is not steady:** The autotuning will be executed every time the controller enters in the autotuning mode and when the temperature does not stabilize inside the time period programmed in the function F12.

If an error occurs during the system data collection, the controller will interrupt the autotuning and emit an alarm with the message **AL1**. Then it returns to the operation mode set before the autotuning activation.

## 6. EASY ACCESS FUNCTIONS

### 6.1 - Proportional output value indication

Press the **SET** key shortly for displaying the current proportional output value. The percentage value will be displayed followed by the indication **---**.

### 6.2 - Minimum/Maximum temperature indication

Press **▲** shortly to display the minimum/maximum temperature. When pressing the key, the message will be displayed indicating the sensor temperature followed by the indication **---**. If you hold the **▲** key pressed, the values are restarted and the message **F5E** is displayed.

### 6.3 - Controller operation mode selection

Hold the **▲** key pressed for 4 seconds to choose the controller operation mode. After pressing the key, the **POD** message will be displayed followed by the current operation mode. Use the **▼** and **▲** keys to choose one of the following options:

- OFF** Controller OFF
- MAN** Controller in the manual mode
- AUT** Controller in the automatic mode

Use the **SET** key to confirm the selection and wait the message **---** indicating that the setting is finished.

### 6.4 - Canceling the active alarms

Press the **▼** key shortly to cancel the indication of current active alarms. After pressing the key, the **ALN OFF** message is displayed and all the current active alarms will be deactivated.

### 6.5 - Autotuning manual activation/deactivation

You can activate or deactivate the PID parameter autotuning by holding the **▼** key pressed for 2 seconds. The **Autn** message will be displayed followed by the **On** message (for activating) or **OFF** (for deactivating). When manually activating the autotuning, its starting conditions described in item 5 will not be tested.


## 7 - DISPLAY MESSAGES

- ALD** Low temperature alarm
- AHI** High temperature alarm
- ALI** Autotuning error
- Indicates that the instrument is operating in a permanent state.
- Err1** Indicates the autotuning was not completed after 12 hours.
- Err2** Indicates an error occurred in the parameter calculation during the autotuning.
- Err3** Indicates an error occurred in the temperature reading during the automatic control.
- Err4** Temperature sensor disconnected or out of range
- PPP** Invalid parameters configuration

The outputs are turned off automatically in this situation


Please check which parameters have invalid data configured and correct them to return to normal operation

## 8. CONNECTION

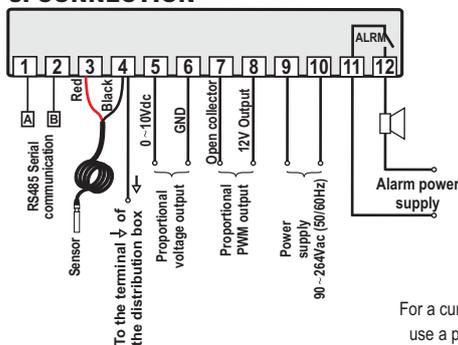

For a current higher than the specified value, use a power relay for activating the alarm.

## Integrating Controllers, RS-485 Serial Interface and Computer

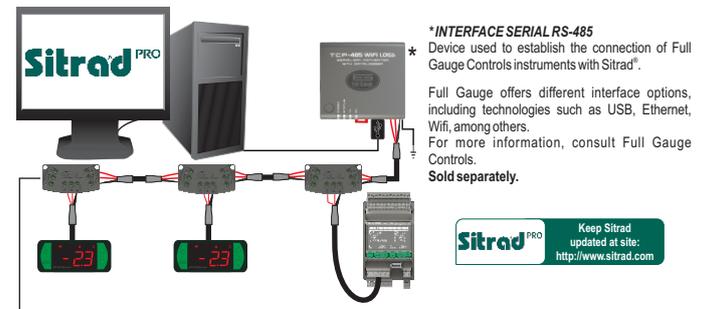

### CONNECTION BLOCK


It is used to connect more than one controller to the Interface. The wire connections must be made as follows: Terminal A of the controller connect to terminal A of the connection block, which in turn, must be connected to terminal A of the Interface. Repeat the procedure for terminals B and  $\pm$ , being  $\pm$  the cable screen.

### IMPORTANT

According to the chapters from the IEC60364 standard:

- 1: Install protectors against over voltage on power supply
- 2: Sensor cables and computer signals can be together, however not at the same place where power supply and load wires pass for
- 3: Install suppressor of transient in parallel to loads to increase the useful life of the relays

### Wiring diagram of suppressors in contactors

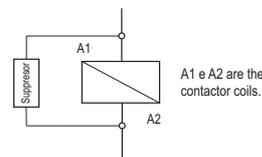

### Wiring diagram of suppressor for direct drive



## ENVIRONMENTAL INFORMATION

**Packaging:** The materials used in the packaging of Full Gauge products are 100% recyclable. Try to dispose of it through specialized recycling agents.

**Product:** Components used in Full Gauge controllers can be recycled and reused if disassembled by specialized companies.

**Disposal:** Do not burn or dispose of controllers that reach the end of their service life. Observe the legislation in your area regarding the disposal of electronic waste. If you have any questions, please contact Full Gauge Controls.

**WARRANTY TERM- FULL GAUGE CONTROLS**  
Products manufactured by Full Gauge Controls, as of May 2005, have a warranty period of 10 (ten) years directly with the factory and 01 (one) year with accredited resellers, starting from the date of the consigned sale that appears on the tax receipt. After this year with resellers, the warranty will continue to be in force if the instrument is sent directly to Full Gauge Controls. This period is valid for the Brazilian market. Other countries have a warranty of 2 (two) years. Products are warranted in the event of manufacturing failure that makes them unsuitable or inadequate for their intended applications. The warranty is limited to the maintenance of instruments manufactured by Full Gauge Controls, disregarding other types of expenses, such as indemnity due to damage caused to other equipment.

### EXCEPTIONS OF THE WARRANTY

The Warranty does not cover shipping and/or insurance costs for shipping products with indications of defect or malfunction to Technical Support. Also, the following events are not covered: natural wear of parts, external damage caused by falls, or improper packaging of products.

### LOSS OF WARRANTY

- The product will lose the warranty automatically if:
- Failure to follow the instructions for use and assembly contained in the technical description and the installation procedures contained in Standard NBR5410;
  - It is subjected to conditions beyond the limits specified in its technical description;
  - It is tampered with or repaired by a person not on Full Gauge's technical team;
  - Damage is caused by falling, hitting and/or impact, water infiltration, overload and/or atmospheric discharge.

### WARRANTY USE

In order to receive the warranty, the customer must send the duly packaged product, along with the corresponding purchase Tax Receipt, to Full Gauge Controls. The shipping charge of the products is at the customer's expense. It is also necessary to send as much information as possible regarding the detected defect, thus enabling faster analysis, testing and execution of the service.

These processes and the eventual maintenance of the product will only be carried out by Full Gauge Controls Technical Assistance, at the Company's headquarters - Rua Júlio de Castilhos 250 - CEP 92120-030 - Canoas - Rio Grande do Sul - Brazil.