# MT-444 € Faston

### DIGITAL REFRIGERATION CONTROLLER

lock



coupling



mode



light











EVOLUTION

### 1. DESCRIPTION

 $differentials \ (hysteresis), as well as specific keys for triggering / disabling \ and \ turn \ the \ lamp \ on / \ off. \ It \ also$ has a digital filter, which has the purpose of simulating an increase in mass in the ambient sensor (S1), delaying its response time (thermal inertia) and avoiding unnecessary compressor trips. It also includes an intelligent blocking of functions and a shutdown mode of the control functions. Product conforming to UL Inc. (United States and Canada).

### 2. SAFETY RECOMMENDATIONS

- Check the controller for correct fastening;
- $\hbox{-} \textit{Make sure that the power supply is off and that it is not turned on during the controller installation};\\$
- Read the present manual before installing and using the controller;
- Use adequate Personal Protective Equipamenet (PPE):
- For application at sites subject to water spills, such as refrigerated counters, install the protecting vinyl supplied with the controller:
- For protection under more critical conditions, we recommend the Ecase cover, which we make available as an optional item (sold separately);
- -The installation procedures should be performed by a qualified technician.

### 3. APPLICATIONS

- Beverage displays; · Reach-in coolers;
- Refrigeration counters;
- Up right freezers.


#### 4.TECHNICAL SPECIFICATIONS MT-444E Faston: 115 or 230Vac ±10%(\*) (50/60 Hz) Power supply MT-444EL Faston: 12 or 24Vac/dc +10%(\*) Approximate consumption **Setpoint Temperature** - 50 to 75°C (-58 to 167°F) Operating Temperature -10 to 50°C / 14 to 122°F Operating humidity 10 to 90% RH (without condensation) COMP: 12(8)A / 240Vac 1HP **DEFR:** 3A / 240Vac 720W Maximum current per output FAN: 5(3)A / 240Vac LIGHT: 5(3)A / 240Vac Digital input input for open-door detection (dry contact type) Maximum dimensions (\*\*) (mm) 76 x 34 x 84 (WxHxD) Cutouts dimensions (mm) $X = 71\pm0.5 Y = 29\pm0.5$ (see Image V)

(\*) Admissible variation in relation to the voltage rating

(\*\*) Maximum dimensions without connectors.

#### **5. INDICATORS AND KEYS** Refrigeration indicator LED Fan indicator LED Light indicator LED Defrost indicator LED Power-saving mode indicator LED Temperature unit indicator LED \$ F Quick Access 34 Έ Upper key Menu Key (Flatec Q Set Key Lower key -444⋿ Ω www.fullgauge.com

#### **NEW CONNECTION SYSTEM (QUICK COUPLING): FASTON and PUSH-IN FAST**

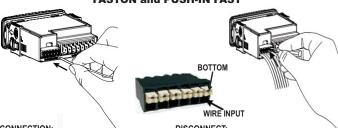

### CONNECTION:


- Hold the wire near its end and insert it into the desired slot
- If necessary, press the bottom to assist the connection.

#### NOTE:

- In the connectors 1 to 6 the maximum wire diameter that can be used is 1.5mm<sup>2</sup>
- The wires must be tinned or use Rocket Pin terminals with a maximum diameter of 0,75mm<sup>2</sup>.

### DISCONNECT:

- To disconnect the cord, press the bottom and remove it.

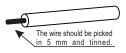



### 6.1. Temperature sensor connection

- Connect the sensor S1 wires to terminals "1 and 2" and wires sensor S2 to terminals "3 and 4": the polarity is not relevant.
- Length of the sensor cables can be increased by user himself to up to 200 meters, using a PP 2x24 AWG cable.

### 6.2. Recommendations of IEC60364 standard

a) Install overload protectors in the controller supply

- b) Install transient suppressors suppressor filter RC in the circuit to increase the service life of the controller relay. See connection instructions of the filter on the previous page.
- c) The sensor cables may be together, but not in the same conduit where the power supply of the controller and/or of the loads passes through.

### 7. FIXING PROCEDURE

- a) Cutout the panel plate (Image V item 13) where the controller will be fixed, with dimensions
- $=71\pm0.5$  mm and Y  $=29\pm0.5$  mm;
- $\textbf{b)} \, \text{Remove the side locks (Image \, VI item \, 13): To \, do \, this, squeeze \, the \, elliptical \, central \, part \, (with \, the \, Logo)} \, \\$ Full Gauge Controls) and move the latches back:
- c) Pass the wires through the cutout of the plate (image VII Item 13) and make the electrical installation as described in item 6:
- d) Insert the controller into the panel cutout, from the outside in:
- e) Replace the latches and push then until they are pressed against the panel, securing the controller to the housing (see arrow in Figure VI - item 13);
- f) Adjust the parameters as described in item 9.
- MARNING: for installations requiring liquid-tight sealing, the cut-off for the installation of the controller should be at must 70.5x29mm. The side latches must be secured so that they press the  $rubber \, sealing \, to \, prevent \, in filtration \, between \, the \, cutout \, and \, the \, controller.$ <u>Vinyl protector</u> - Image IX (item 13)
- Protects the controller should when installed in a place with splashing water, such as in refrigerated counters. This adhesive vinyl accompanies the instrument, on the packaging
- a) Retract the lateral locks (Image VI item 13);
- b) Remove the protective film from the adhesive side of the vinyl;
- c) Apply the vinyl over the whole top, folding the flaps, as indicated by the arrows Image IX (item 13);
- d) Reinstall the latches.
- NOTE: The vinyl is transparent, allowing to visualize the electric scheme of the instrument.

## 6. WIRING DIAGRAM

Image I - Connection 115 Vac

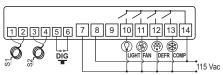


Image III - Connection 12 Vac/dc

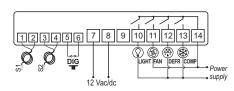


Image II - Connection 230 Vac


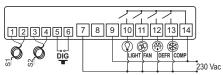


Image IV - Connection 24 Vac/dc

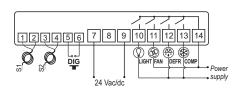

### Controller power supply

Use the pins according to table below, considering the set version:


Pins	MT-444E Faston	MT-444EL Faston
9 and 10	115 Vac	12 Vac/dc
9 and 11	230 Vac	24 Vac/dc

The sensor S1 must be in the ambient. The **sensor S2** must be placed in the evaporator through metallic cramp.

### 8. QUICK ACCESS MENU AND BASIC OPERATIONS


#### 8.1. Quick Access Menu Map

You can navigate through the function menus by pressing the  $\Delta$  key (Flatec). See items below for further details. The map of functions is shown below:

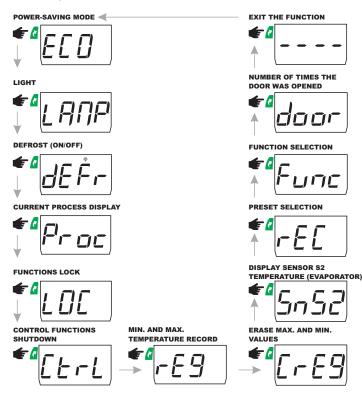


### 8.2 Turning power-saving mode on/off

To switch power-saving mode on/off, press with quick touch or use the quick access menu (Item 8.1).

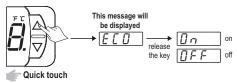


### 8.3 Switch the light on/off

To switch the light on/off, press 🗸 with quick touch or use the quick access menu (Item 8.1).

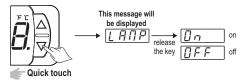


## 8.4 Silencing the alarm

To silence the audible alarm, press the \quad key (quick touch).

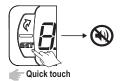


### 8.5 Manual Defrost

To start/stop a manual defrost, regardless of the schedule, press and hold the key for 6s, until the dEFr message appears. Then release it. The defr message will appear when it has started and the defr message when it has been stopped. It can also be accessed through the quick access menu (Item 8.1).

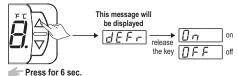


### 8.6 Display temperature in sensor S2 (evaporator)

The temperature in sensor S2 (evaporator) can be viewed by pressing the **a** key (quick touch) until the message [5,5,5] is displayed. If the sensor is disabled the indication [----will be displayed.

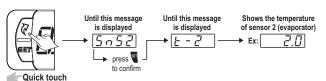


### 8.7 Display process stage and current setpoint

To see which process stage is underway, press and hold the very for 4s, until the Proc message appears. Then release it. The stage of the process which is in progress will be displayed, showing the desired temperature (setpoint) in use, in relation to the current operating mode (normal/power-saving). It can also be accessed through the quick access menu (Item 8.1).

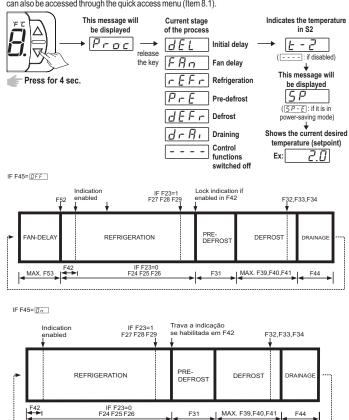

### 8.8 Change Preset


To select the desired preset, press and hold the key for 2s, until the Fc. Message appears, and then release it. Use the hard or keys to select the desired preset (1,2 or 3) and press to confirm.

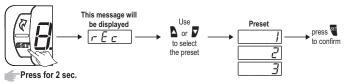

## 8.9 Maximum and Minimum Temperature Recording


The Maximum and Minimum Temperature Record can be viewed by pressing the **4** key until the message [- F 9] is displayed (see item 8.1 on the map):

To delete the current minimum and maximum values, press the \( \begin{align\*}{c} \) key (quick touch) until the message \( \begin{align\*}{c} \in \mathcal{E} \end{align\*} \) gis displayed. Press \( \begin{align\*}{c} \) to confirm. Another way to erase the records is by pressing the \( \begin{align\*}{c} \) key for 2s while the records of maximums and minimums are being displayed. The message \( \begin{align\*}{c} -5 \in \mathcal{E} \) confirms that data has been erased.

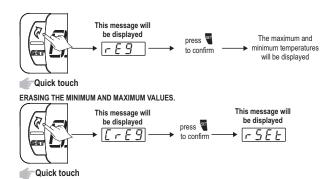

### 8.10 Selecting the unit temperature

Whenever the units are changed, the configuration of the functions assumes the factory default, thus requiring reconfiguration.

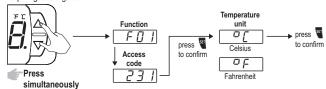


### 8.11 View the number of times the door was opened

The number of times the door was opened can be viewed by pressing the key (quick touch) until the message Applied is played, and then the number is shown

message door is displayed, and then the number is shown.


To reset this number to zero, press the key while the number is being shown until the indication of SEE is displayed.

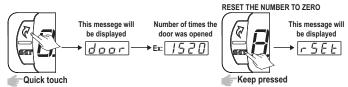

### 9. ADVANCED OPERATIONS

### 9.1 Changing the configured setup

The functions menu can be accessed through the quick access menu, option Func or by pressing and simultaneously during the temperature display. To allow a change of parameters, enter Fill by pressing (quick touch) and enter code 123.

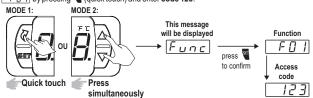

### 9.2 Control functions shutdown

When control functions are shutdown, the controller starts to operate purely as a temperature indicator, with all outputs deactived. How the operation of turning the control functions off is made shall depend on the parameter " \_\_F 77] -Control functions shutdown" setting:

Does not allow the control functions shutdown.


Allows the control functions to be turned on and off only if the functions are unlocked.

Allows the control functions to be turned on and off even if the functions are locked. With the key (quick touch), select [[[-]]], and then press (quick touch) to confirm. Also is possible turn on the control functions by pressing the key (quick touch) to confirm.

### 9.3 Functions lock

The use of the functions lock brings greater security to the operation on the instrument. When it is active the presets and other parameters can be visible to the user, but are protected against undue changes( $\boxed{F.75}$ =2) or you can lock only the changes in the control functions and leave the selection of presets unlocked ( $\boxed{F.75}$ =1). To lock the functions, access the option  $\boxed{L.D.}$  in the quick access menu using the  $\boxed{d}$  key (Flatec) and press  $\boxed{d}$  to confirm. The message  $\boxed{n.o.}$  will be displayed if the lock is inactive. At this time, press and hold the  $\boxed{d}$  key for the time configured in function  $\boxed{F.75}$ . The activation will be indicated by the message  $\boxed{L.D.}$  and will take place only if function  $\boxed{F.75}$  is configured with 1 or 2.

To deactive the lock, switch the controller off and on again with the  $\[ \]$  key pressed. Keep the key pressed until the message  $\[ \]$   $\[ \]$   $\[ \]$   $\[ \]$   $\[ \]$  is indicated.

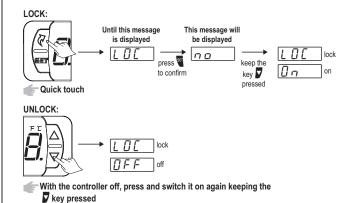

/ turn off the control functions by pressing the key a for 5 seconds.	·					
9.4 Parameters table			CELSIUS (FAHRENHEIT)			IT)
FUN FUNCTION		DESCRIPTION	MÍN	MÁX	UNIT.	DEFAULT
F [] Access code: 123 (one hundred and twenty-three)	It allows entering the access codes provide  123 - Allows the access to change the  231 - Allows configuring the units of m  231 - To select the units the instrumen access code  231 , and then pre  1 using the 207 key, and press	parameters of the table. easurement	-	-	-	-
Desired temperature (setpoint) (r1)  FIJ Desired temperature (setpoint) (r2)  Desired temperature (setpoint) (r3)		e normal operating mode. When the sensor S1 onfigured value for this function, the compressor	-50 (-58)	75.0 (167) 75.0 (167) 75.0 (167)	°C (°F) °C (°F) °C (°F)	-6.0 (21) -1.0 (30) 2.0 (36)
F 0 5 Desired temperature (power-saving setpoint) (r1)  F 0 5 Desired temperature (power-saving setpoint) (r2)  Desired temperature (power-saving setpoint) (r3)		he power-saving mode is active. If the sensor ne configured value for this function, the	-50 (-58) -50 (-58) -50 (-58)	75.0 (167) 75.0 (167) 75.0 (167)	°C (°F) °C (°F) °C (°F)	1.0 (34) 4.0 (39) 7.0 (45)
Minimum desired temperature (setpoint) allowed to the user  Maximum desired temperature (setpoint) allowed to the user	Littills preventing the accidental setup of	of an excessively high or low temperature setpoint, mption by keeping the system turned on.	, ,	75.0 (167) 75.0 (167)	°C (°F)	-50 (-58) 75.0 (167)
F ID       Control differential of operating setpoint (r1)         F I I       Control differential of operating setpoint (r2)         F I ≥       Control differential of operating setpoint (r3)	operating mode. Example: If adjusted [	In grefrigeration OFF and BACK ON in normal $F[0,\overline{c}] = [-1,0]$ , the the sensor S1 temperature (room) is less than is higher than $[-5,0]$ ( $[-4,0]$ + $[-1,0]$ ).	0.1 (1)	20.0 (36)	°C (°F)	3.0 (5)
Control differential of power-saving setpoint (r1)  F 14  Control differential of power-saving setpoint (r2)  F 15  Control differential of power-saving setpoint (r3)	This is the difference between turning r mode.	refrigeration OFF and BACK ON in power-saving	0.1 (1)	20.0 (36)	°C (°F)	3.0 (5)
F 15 Antifreeze safety differential temperature	F5]. Example: If F02 = 3.0 (se	the current preset setpoint after the time set in expoint), $\boxed{F \mid \vec{U} = \boxed{-2.0}}$ (differential) and geration will be turned off at $\boxed{-4.0}$ ( $\boxed{-3.0}$ + $\boxed{-2.0}$ + $\boxed{-1.0}$ ).	0.1 (1)	20.0 (36)	°C (°F)	2.0 (4)
Enables the evaporator temperature sensor (sensor S2)	The sensor S2 can be disabled. If this	is the case, defrost will be initiated by time.	OFF	Ū n	-	<u>OFF</u>
F;B Digital filter operating mode		n the temperature rises and when it falls; n the temperature rise. When the temperature fall,	0	1	-	0
Intensity of the digital filter applied to the room sensor(sensor S1)	to change by 0.1°C. A typical application food frezzers, as, when the door is open	esents the time ( in seconds) for the temperature on for this type of filter is for ice cream and frozen ned, a mass of hot air reaches the sensor directly, and temperature indication and often unnecessarily	no	20	sec.	no
Local calibration of the room sensor (sensor S1) Local calibration of the evaporator sensor (sensor S2)	This compensates for any deviations change in cable lenght	in the sensor reading due to replacement or a	-20.0 (-36)	20.0 (36)	°C (°F)	0.0 (0)

				CELSIUS	(FAHRENHEI	T)
FUN	FUNCTION	DESCRIPTION	MÍN	MÁX	UNIT.	DEFAULT
F22	Defrosttype	☐ = Electrical defrost (by resistance), where only the defrost output is activated ☐ = Hot gas defrost, whereby the compressor and defrost output are activated ☐ = Natural defrost, where only the fan output is activated.	0	2	-	0
F23	Condition to start the defrost		0	1	-	0
F 2 4 F 2 5 F 2 6	Interval between defrosts if	Determines how often defrost will be performed, which is the time counted from the end of the previous defrost.	1	999	Н	12
F27 F28 F29	Evap. temp. to start defrost if F23 =	When the evaporator temperature ( sensor S2) reaches the value configured by this function, the controller will initiate the countdown to defrost.	-50 (-58)	75.0 (167)	°C (°F)	-5.0 (23)
F30	Confirmation time of low temperature (sensor S2) to start the pre-defrost if $\overbrace{F \supseteq \Im} = \underbrace{\hspace{1cm}}$	When the evaporator temperature (sensor S2) drops and reaches the value set in $\boxed{\texttt{F21}}$ , $\boxed{\texttt{F29}}$ , $\boxed{\texttt{F29}}$ , the countdown to start the pre-defrost begins. During this stage, if the temperature remains low, the pre-defrost starts. Otherwise, if this temperature rises above the set value, the system returns to the refrigeration stage.	no	999	min.	10
F3 I	Pre-defrost Time (gas collecting)	When starting the defrosting process, the controller will only activate the fan to take advantage of the gas residual energy. $ \frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2} \left( \frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2} \left( \frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2} \int_{-\infty$	no	999	min.	no
F32 F33 F34	Evap. temp. (sensor S2) to finalize the defrost (r1) Evap. temp. (sensor S2) to finalize the defrost (r2) Evap. temp. (sensor S2) to finalize the defrost (r3)	If the temperature on the evaporator (sensor S2) reaches the set valuem the defrosting process will end as usual, i.e. by temperature. This, it optimizes the defrosting process.	-50 (-58)	75.0 (167)	°C (°F)	40.0 (104)
F35 F36 F37	Room temperature to end the defrost (r1) Room temperature to end the defrost (r2) Room temperature to end the defrost (r3)	If the room temperature ( sensor S1) reaches the set value, the defrosting process will end, avoiding an eventual unwanted rising of product temperature.	-50 (-58)	75.0 (167)	°C (°F)	20.0 (68)
F 3 8	Maximum time without defrosts if F23 =	If the controller is configured to carry out the defrost based on temperature, this time works as a safeguard in situations where the evaporator temperature (sensor S2) does not reach the programmed values in	1	999	Н	12
F 3 9 F 4 0 F 4 1	Maximum defrost time (for safety) (r1) Maximum defrost time (for safety) (r2) Maximum defrost time (for safety) (r3)	This function is used to set the maximum time for a defrost. If, within such period, defrosting is not terminated by temperature, a dot will start blinking on the bottom-right corner of the display (it needs to be enabled in $\overline{[F,Y]}$ ), indicating that the defrosting process has been terminated by the time limit rather than by temperature. This may happen if the temperature set is too high, the time limit is too short, or the sensor S2 is disconnected or not connected to the evaporator.	1	999	min.	30
F42	Locked temperature indication during defrost	This function is intended to prevent an increase in room temperature, due to the defrosting process being displayed. During the defrosting process, the last measured temperature in the refrigeration cycle will be frozen on the display. The indication will be unfrozen when the temperature before defrost is reached or when the time set using this function is exceeded, after the start of the next refrigeration cycle (whichever comes first). If set to the value $ \boxed{0} $ , the temperature display will only be frozen at the defrost stage. This function can be disabled if set to $ \boxed{0} \boxed{0} $ .	no	999	min.	15
F43	Defrost when powering the controller	Allows a defrost to start when the controller is powered. For example, when the power supply returns (in the case of a power shortage) $$	DFF	<u> </u>	-	<u> </u>
FYY	Draning time	Time required for dripping, i.e. to drain the last drops of the evaporator. During this period, all outputs remain switched off. If you do not want this stage, adjust this time to $\boxed{\ } \underline{\ } \underline{\ } \underline{\ } \underline{\ } \underline{\ } \underline{\ }$ .	no	999	min.	1
F 45	Enable second defrost output	With this function activated, you can make the output FAN operate as a second defrost output. This output is activated during the execution of the pre-defrost and drainage.  Note: With FYS = ON, the functions related to fan control are disregarded.	<u>OFF</u>	<u> </u>	-	OF F
F46 F47	Fan operation mode : Normal Mode Fan operation mode : Power-Saving Mode	The fan operation settings in normal and power-saving mode are: $\underbrace{\textit{H}_{u} \not\models_{o}}$ Automatic: The fan will be permanently switched on while the compressor is activated. When the compressor is off, the fan will cycle according to the time set in $\underbrace{\textit{F}_{v} \not\ni_{o}}$ and $\underbrace{\textit{F}_{v} \not\ni_{o}}$ . Continuous: The fan will be constantly activated. $\underbrace{\textit{d}_{v} \not\models_{v}}$ Dependent: The fan will be activated together with the compressor.	Auto	dEPE	-	dEPE
F48	Fan ON Time if $FYB$ and $FY7$ are in automatic mode $(PUE0)$	This is the amount of time the fan will remain ON if $\boxed{\textit{F45}}$ and $\boxed{\textit{F47}}$ are configured as automatic, while the compressor is off.	1	999	min.	1
F 49	Fan OFF Time if $[\underline{-}\underline{F}\underline{Y}\underline{E}]$ and $[\underline{-}\underline{F}\underline{Y}\underline{7}]$ are in automatic mode $([\underline{R}\underline{\nu}\underline{E}\underline{o}])$	This is the amount of time the fan will remain OFF if FY6 and FY7 are configured as automatic, while the compressor is off.	1	999	min.	999
F 5 0	Fan operation when opening the door	The fan can be set to remain activated or deactivated during the period when the door is kept open.	0 F F	0 n	-	0 F F
F5 I	Fan deactivation by high temperature in evaporator	The purpose of this function is to stop the evaporator fan until the room temperature approaches that listed in the project, thus preventing a high temperature and suction pressure which can damage the compressor. If the evaporator temperature surpasses that of the value, the faz is turned off, turning back on with a set hysteresis of 2°C/4°F. It is a valuable resource when, for example, cooling equipment has been inactive for a few days or when freezer rooms or refrigerated counters are refilled with stock.	-50 (-58)	75.0 (167)	°C (°F)	75.0 (167)
F 5 2	Evaporator temperature for fan reactivation after draining	After drainage, the fan's delay cycle is enabled. The compressor is immediately turned on because the evaporator temperature is high, but the fan is only enabled after the evaporator temperature decrease to the set programmed value. This process is required to remove residual heat (caused by the defrosting process) in the evaporator, preventing room temperature to rise.	-50 (-58)	75.0 (167)	°C (°F)	2.0 (36)
F 5 3	Maximum fan reactivation time after draining (fandelay)	For safety, in case the evaporator temperature does not reach the value in F52 or the sensor S2 is disconnected, fan reactivation will occur after the function's set time.	no	999	min.	1

				CELSIUS	(FAHRENHEI	Γ)
FUN	FUNCTION	DESCRIPTION	MÍN	MÁX	UNIT.	DEFAULT
F 5 4	Digital Input operating mode ( Door Sensor)	Digital input disabled; Normally open contact (NO); Normally closed contact (NC);	no	2	-	1
F 5 5	Door open time until instant defrost begins	If the door is kept open for a longer period than set with this function, an instant defrost will take place, provided that the evaporator temperature (sensor S2) is lower than $\boxed{ \digamma33}$ , $\boxed{ \digamma33}$ , $\boxed{ \digamma37}$ and the room temperature (sensor S1) is lower than $\boxed{ \digamma35}$ , $\boxed{ \digamma36}$ , $\boxed{ \digamma37}$ .	no	999	min.	30
F 5 6	Door open time until compressor and fan are turned OFF	For safety, if the time that the door is kept open is greater than that set with this function, both the compressor and the fan will be turned off.	no	999	min.	5
F57	Time unit of functions $\boxed{\textit{F58}}$ , $\boxed{\textit{F59}}$ and $\boxed{\textit{F6}}$	Time in minutes  Hour Time in hours	[] <sub>1</sub> n	Hour	-	[]. n
F 5 8	Time of door closed for turning the lights off	This setup defines when the light will be turned off with the door closed. It contributes towards power saving.	no	999	min./H	2
F 5 9	Time of door closed for activation of power-saving mode	This setup defines when power-saving mode will be activated with the door closed. The light output will be deactivated if it is ON and the operation setpoint will control the system according to the power-saving setpoint.	no	999	min./H	n o
F 6 0	Maximum time on power-saving mode with the door closed	This allows you to set a maximum operating time for power-saving mode while the door is closed. After this time, the setpoint returns to the normal operating mode. This time is calculated in hours.	no	999	Н	no
F 6 I	Time of closed door for activation of antifreeze safety differential temperature	This function aims at preventing products from freeze after a period of closed door.	no	999	min./H	no
F 6 2	Minimum time with compressor OFF	This is the minimum time the compressor will remain turned off, i.e. time between its last deactivation and the next activation. It helps to relieve the discharge pressure and increase the lifespan of the compressor.	no	999	min.	no
F 6 3	Minimum time with compressor ON	This is the minimum time the compressor will remain on, i.e. time between the last activation and the next deactivation. It helps to prevent high voltages within the power grid.	no	999	min.	no
F 6 4	Compressor ON time in case of error on sensor S1 (room)	If the room sensor (sensor S1) is disconnected or out of its measuring range, the	0	999	min.	20
F 6 5	Compressor OFF time in case of error on sensor S1 (room)	ressor OFF time in case of error on sensor S1 compressor will turn on and off according to the setup configured in these functions.	0	999	min.	10
F 6 6	Compressor delay time when powering the controller	When the instrument is switched on, the compressor will be kept off for some time, thus delaying the beginning of the process. The purpose of this is to avoid peaks in electric power demand when power returns after a power fault and many devices are connected to the same mains. To do this, just set different times for each device.	no	999	min.	2
F 6 7	Lamp/ alarm output operating mode		0	2	-	0
F 6 8	Maximum time of compressor operation without reaching the desired temperature (setpoint)	This is the alarm that indicates when the compressor is active for longer than the configured time set by this function, without reaching the setpoint.	no	999	Н	no
F 6 9	Minimum room temperature alarm relative to the setpoint	This is the temperature difference in the current setpoint to activate the alarm (buzzer) for LOW temperature.	0.1 (1)	50.0 (90)	°C (°F)	10.0 (18)
F70	Maximum room temperature alarm relative to the setpoint	This is the temperature difference in the current setpoint to activate the alarm (buzzer) for HIGH temperature. $Example: Setpoint = \underbrace{ \  \  }_{1,0,0}, \underbrace{ F \ 6 \ 9}_{1,0,0} = \underbrace{ \  \  }_{1,0,0}. \text{ In this case, the alarm will only be activated if the room temperature higher than } \underbrace{ \  \  }_{1,0,0}, \underbrace{ \  \  }_{1,0,0} + \underbrace{ \  \  }_{1,0,0}).$	0.1 (1)	50.0 (90)	°C (°F)	50.0 (90)
F7I	Door opening time until the alarm is activated	When the door is opened, the <u>DPEn</u> message will appear on the display and the open door timer starts. If this time is longer than the set time with this function, the audible alarm (buzzer) will be activated.	no	999	min.	1
F72	Temperature alarm delay	This function is used to stop the alarm for a certain period, due to a possible increase in temperature.	no	999	min.	no
F73	Alarm delay when powering the controller	During the time set in this function, the alarm remains off, waiting for the system to start working.	no	999	min.	no
F 7 4	Indication to defrost terminated by time	When defrost is concluded by time and not by temperature, the user is alerted by a blinking dot on the lower right corner of the display ( $\boxed{}$ ).	<u>OFF</u>	<u>O</u> n	-	0 n
F 75	Functions Lock	It allows and configures the functions lock; this function may operate in the following ways:	no	2	-	2
F 7.6	Time for functions lock	With this function enabled, setups are protected against unauthorized changes, and are available for viewing only. In this state, when trying to change these values, a Label message will be displayed.  Note: To activate or deactivate the functions lock, please refer to item 9.3	15	60	sec.	15
F77	Control functions shutdown	When control functions are shutdown, the controller starts to operate purely as a temperature indicator, with all outputs deactivated. This function can operate in the following ways:	no	2	-	no

## 10. DISPLAY SIGNALINGS

_	
Errl	Room sensor error: Sensor disconnected or damaged.
Err2	Evaporator sensor error: Sensor disconnected or damaged.
ALhi	High room temperature alarm (sensor 1).
ALLO	Low room temperature alarm (sensor 1).
ALrE	Maximum compressor on time exceeded without reaching the control temperature (setpoint).
OPEn	Door open indication.
**	Alert of defrost concluded by time and not by temperature. The dot in the lower right corner of the display will blink until the next defrost (if enabled by the function $\frac{\mathcal{F}}{\mathcal{F}}$ ).
Flashing LED	If $\overline{FYS} = \overline{0FF}$ Indicates drainage in progress. If $\overline{FYS} = \overline{0n}$ Indicates drainage and pre-defrost in progress.
<u>O</u> FF	Control routines turned off.
AOPa	Open door alarm.
ECAL	Contact Full Gauge Controls.
PPPP	Reconfigure the function values.

### 11. GLOSSARY OF ACRONYMS

- °C: Temperature in Celsius degrees. °F: Temperature in Fahrenheit degrees.
- Defr: Defrost.
- LOC: Blocked.
- No: No.
- OFF: Turned off/disabled.
- ON: Turned on, enabled.
- Refr: Refrigeration.
   SET (as in "Setting") (setting or configuration).

## 12. OPTIONAL ITEMS - Sold Separately

### **Ecase protective cover**

It is recommended for the Evolution line, keeps water from entering the back part of the instrument. It also protects the product when the installation site is washed.


**NOTE:** Ecase is compatible with the use of small type Faston terminals, usually with silicone protection.



## **Extended frame**

It allows the installation of Evolution line controllers with sizes 76 x 34 x 77 mm in various situations, since it does not require precision in the notch of the instrument fitting panel.

The frame integrates two switches of 10 Amperes that may be used to actuate interior light, air curtain, fan, and others.

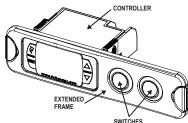

## EasyProg - version 2 or higher

It is an accessory that has as its main function to store the parameters of the controllers. At any time, you can load new parameters of a controller and unload them on a production line (of the same controller), for example. It has three types of connections to load or unload the parameters:

- Serial RS-485: It connects via RS-485 network to the controller (only for controllers that have RS-485).
- USB: it can be connected to the computer via the USB port, using Sitrad's Recipe Editor.
- Serial TTL: The controller can be connected directly to EasyProg by the TTL Serial connection.



### Surge Protective

Wiring diagram for instalation of SPD in magnectic contactor

A1 and A2 are the terminals of the contactor coil.




### Wiring diagram for instalation of SPD in line with loads


For direct drive take in to consideration the specified



## 13. ANNEXES - Reference Images

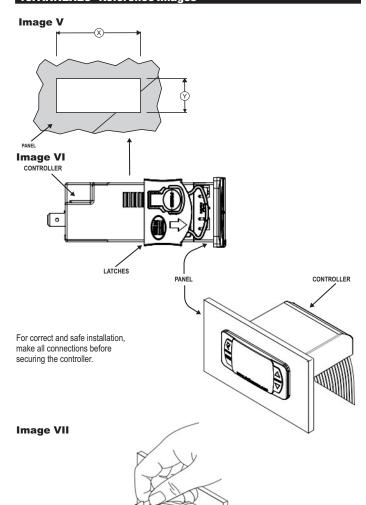



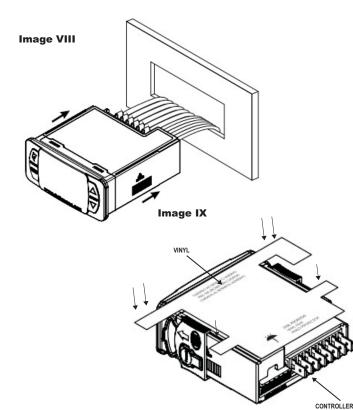



### **ENVIRONMENTAL INFORMATION**

### Packaging:

The materials used in the packaging of Full Gauge products are 100% recyclable. Try to perform disposal through specialized recyclers.

#### Product:

The components used in Full Gauge controllers can be recycled and reused if disassembled by specialized companies.

#### Disposal:

Do not incinerate or dispose the controllers that have reached the end of their service as household garbage. Observe the laws in your area regarding disposal of electronic waste. If in doubt, please contact Full Gauge Controls.

Products manufactured by Full Gauge Controls, as of May 2005, have a two (02) year warranty, as of the date of the consigned sale, as stated on the invoice. They are guaranteed against manufacturing defects that make them unsuitable or inadequate for their intended use

### **EXCEPTIONS TO WARRANTY**

The Warranty does not cover expenses incurred for freight and/or insurance when sending products with signs of defect or faulty functioning to an authorized provider of technical support services. The following events are not covered either: natural wear and tear of parts; external damage caused by falls or inadequate packaging of products.

#### LOSS OF WARRANTY

Products will automatically lose its warranty in the following cases:

**WARRANTY - FULL GAUGE CONTROLS** 

- The instructions for assembly and use found in the technical description and installation procedures in Standard IEC60364 are not obeyed;
- The product is submitted to conditions beyond the limits specified in its technical description;
- The product is violated or repaired by any person not a member of the technical team of Full Gauge Controls;
- Damage has been caused by a fall, blow and/or impact, infiltration of water, overload and/or atmospheric discharge.

#### USE OF WARRANTY

To make use of the warranty, customers must send the properly packaged product to Full Gauge Controls together with the invoice or receipt for the corresponding purchase. As much information as possible in relation to the issue detected must be sent to facilitate analysis, testing and execution of the service.

These procedures and any maintenance of the product may only be provided by Full Gauge Controls Technical Support services in the company's headquarters at Rua Júlio de Castilhos, 250 - CEP 92120-030 - Canoas - Rio Grande do Sul – Brasil

Rev. 03

©Copyright 2018 • Full Gauge Controls ® • All rights reserved.